

# PX1172RH

---



## Multi-Band GNSS Receiver for RTK Positioning & Heading Applications

### Features

- Centimeter-level accuracy RTK receiver
- Dual antenna input heading capability
- Multi-Band, Quad-GNSS
- 17mm x 22mm size
- NMEA-0183 and RTCM 3.x protocol
- Easy to integrate
- Operating temperature -40 ~ +85°C
- RoHS compliant

### Applications

- Machine control & automation
- Unmanned aerial vehicle
- Precision agriculture
- Precision heading & attitude

The PX1172RH offers centimeter-level accuracy and precise heading based on carrier phase RTK technique and can be used for a wide range of high-accuracy positioning & heading applications. Its 17mm x 22mm stamp size makes it ideal for application requiring compact form factor.

The receiver receives RTCM 3.x data from a local base station, a virtual reference station (VRS) in a Network RTK configuration, or another SkyTra RTK receiver setup as in base station mode to perform carrier phase RTK processing, achieving centimeter level accurate relative positioning.

Dual antenna input enables precise heading unaffected by magnetic surrounding, unmatched performance in both static & dynamic conditions.

The PX1172RH receiver is based on SkyTra's high-performance Phoenix GNSS chipset, featuring fast signal acquisition search engine and high-sensitivity track engine. Search engine performs 16 million time-frequency hypothesis testing per second, offering industry-leading signal acquisition performance.

The receiver is optimized for mass market applications requiring high-precision centimeter-level accuracy, precise heading, high performance, low power, and lower cost.

PX1172RH use GNSS chips qualified according to AEC-Q100 and are manufactured in ISO/TS 16949 certified sites.


## TECHNICAL SPECIFICATIONS

Receiver Type	230 channel Phoenix GNSS engine GPS/QZSS L1/L2C, BeiDou B1I/B2I, Galileo E1/E5b, GLONASS L1OF/L2OF		
Accuracy	Position	1.5m CEP	autonomous mode
		1cm + 1ppm	RTK mode
	Velocity	0.05m/sec* <sup>1</sup>	
	Time	12ns	
	Moving Base Heading	0.13 degree* <sup>2</sup>	
Time to First Fix	1 second hot-start under open sky (average) 28 second warm-start under open sky (average) 29 second cold-start under open sky (average)		
RTK Convergence	< 10sec		
Reacquisition	1s		
Update Rate	1 / 2 / 4 / 5 / 8 Hz		
Operational Limits	Altitude < 80,000m and velocity < 515m/s		
Serial Interface	3.3V LVTTTL level		
Protocol	NMEA-0183 V4.1 GGA, GLL, GSA, GSV, RMC, VTG, ZDA, THS 115200 baud, 8, N, 1		
	RTCM 3.x or SkyTraq raw data binary 115200 baud, 8, N, 1		
Datum	Default WGS-84 and user definable in stand-alone mode Depends on base reference frame when in RTK mode		
Input Voltage	3.3V DC +/-10%		
Current Consumption	250mA		
Dimension	17mm L x 22mm W x 2.9mm H		
Weight:	1.7g		
Operating Temperature	-40°C ~ +85°C		
Storage Temperature	-55 °C ~ +100°C		
Humidity	5% ~ 95% non-condensing		

\*<sup>1</sup> 50% @ 30 m/s for dynamic operation

\*<sup>2</sup> (1-sigma) heading accuracy using 1 meter baseline

## FUNCTIONAL DESCRIPTION

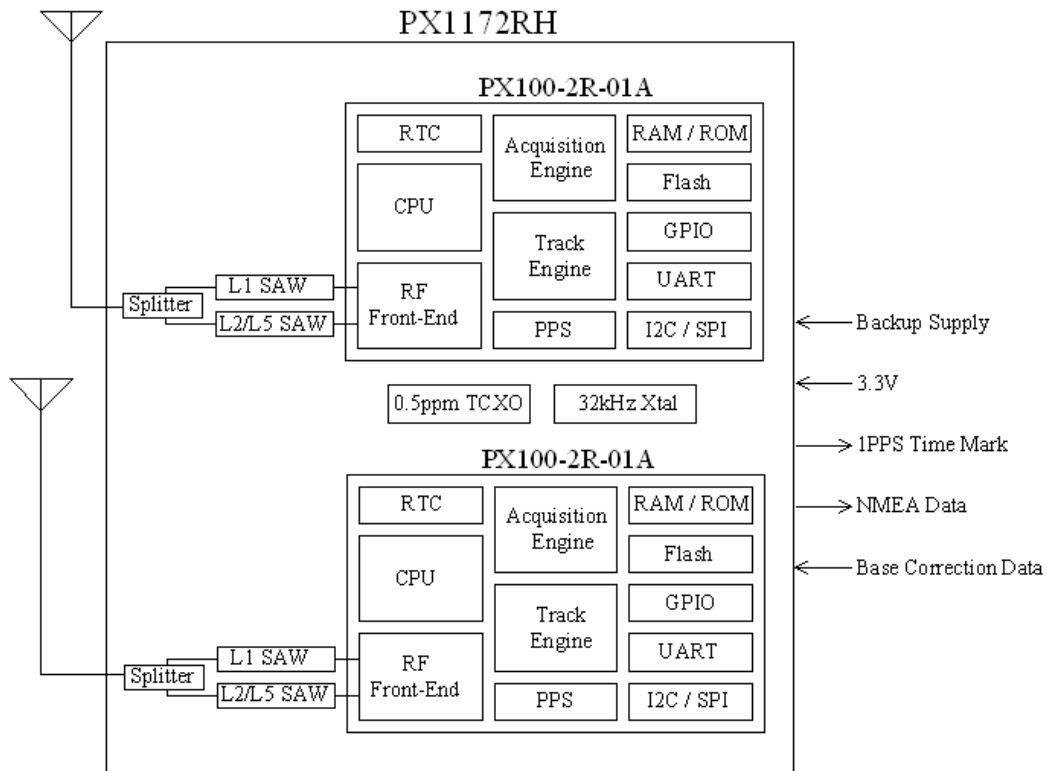

Active antenna is required to use with PX1172RH. The received signal goes through a signal splitter, to individual L1 and L2/L5 SAW filters to remove out-band interference, then to the PX100 GNSS receiver chip for RTK signal processing. Using correction data from an RTK base station, the rover PX1172RH computes its position to centimeter-level accuracy relative to the base station. By using two antennas, PX1172RH can provide accurate heading formed by directional vector of the two antennas. It has below 1-sigma heading accuracy.

2 meter Baseline: 0.07 Degree Accuracy

1 meter Baseline: 0.13 Degree Accuracy

50 cm Baseline: 0.27 Degree Accuracy

## SUPPORTED RTCM MESSAGES


When operating in rover mode, PX1172RH can decode following RTCM 3.3 messages:

RTCM Message Type	Description
1004	Extended L1/L2 GPS RTK observables
1005	Stationary RTK reference station antenna reference point
1006	Stationary RTK reference station ARP with antenna height
1012	Extended L1/L2 GLONASS RTK observables
1033	Receiver and antenna description
1074	GPS MSM4
1075	GPS MSM5
1076	GPS MSM6
1077	GPS MSM7
1084	GLONASS MSM4
1085	GLONASS MSM5
1086	GLONASS MSM6
1087	GLONASS MSM7
1094	Galileo MSM4
1095	Galileo MSM5
1096	Galileo MSM6
1097	Galileo MSM7
1114	QZSS MSM4
1115	QZSS MSM5
1116	QZSS MSM6
1117	QZSS MSM7
1124	BeiDou MSM4
1125	BeiDou MSM5
1126	BeiDou MSM6
1127	BeiDou MSM7
1230	GLONASS Code-Phase Biases

When operating in base mode, PX1172RH can output following RTCM 3.3 messages:

RTCM Message Type	Description
1005	Stationary RTK reference station antenna reference point
1074	GPS MSM4
1077	GPS MSM7
1084	GLONASS MSM4
1087	GLONASS MSM7
1094	Galileo MSM4
1097	Galileo MSM7
1114	QZSS MSM4
1117	QZSS MSM7
1124	BeiDou MSM4
1127	BeiDou MSM7
1230	GLONASS Code-Phase Biases

## PINOUT

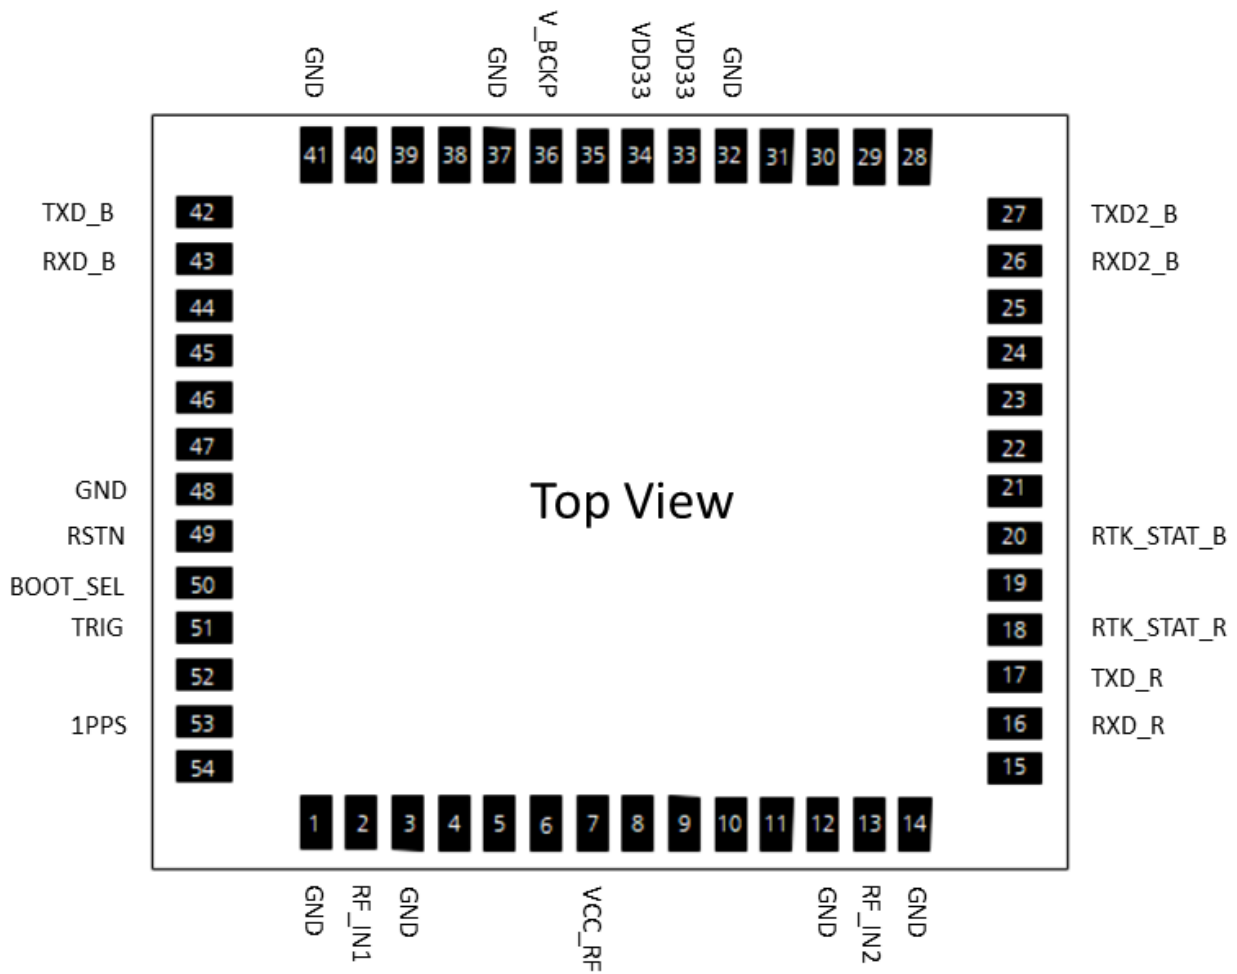

## PINOUT DESCRIPTION


Pin No.	Name	Description
1	GND	Ground
2	RF_IN1	RF input #1 RTK Heading: directional vector from RF_IN1 antenna to RF_IN2 antenna RTK Position: RF_IN1 antenna position
3	GND	Ground
4,5,6	NC	No connection, empty pin
7	VCC_RF	Voltage for external LNA
8,9,10,11	NC	No connection, empty pin
12	GND	Ground
13	RF_IN2	RF input #2
14	GND	Ground
15	NC	No connection, empty pin
16	RXD_R	UART serial data input, 3.3V LVTTTL. UART port for firmware updating of R-chip. Default baud rate 460800.

17	TXD_R	UART serial data output, 3.3V LVTTTL. UART port for firmware updating of R-chip. Default baud rate 460800.
18	RTK_STAT_R	Status signal 0 : RTK Fix for Heading Blink : RTK Float for Heading 1 : otherwise
19	NC	No connection, empty pin
20	RTK_STAT_B	Status signal 0 : RTK Fix for Positioning Blink : RTK Float for Positioning 1 : otherwise
21,22,23,24, 25	NC	No connection, empty pin
26	RXD2_B	UART serial data input, 3.3V LVTTTL. One simplex asynchronous serial UART port is implemented. This UART input is normally for sending RTCM-SC104 correction data or base station SkyTraq raw measurement data to the receiver at 115200 default baud rate. In the idle condition, this pin should be driven HIGH. If the driving circuitry is powered independently of PX1172RH, ensure that this pin is not driven to HIGH when PX1172RH is put to sleep, or a 10K-ohm series resistor can be added to minimize leakage current.
27	TXD2_B	UART serial data output, 3.3V LVTTTL. Not used.
28,29,30,31	NC	No connection, empty pin
32	GND	Ground
33,34	VDD33	Power supply, 3.3V DC
35	NC	No connection, empty pin
36	V_BCKP	Backup supply voltage for internal RTC and backup SRAM, 1.3V ~ 3.6V. V_BCKP must be applied whenever VCC is applied. This pin should be powered continuously to minimize the startup time. If VCC and V_BCKP are both removed, the receiver will be in factory default mode upon power up, all user configuration set is lost. For applications the does not care cold starting every time, this pin can be connect to VCC.
37	GND	Ground
38,39,40	NC	No connection, empty pin
41	GND	Ground
42	TXD_B	UART serial data output, 3.3V LVTTTL. One full-duplex asynchronous serial UART port is implemented. This UART output is normally used for sending position, time and velocity information from the receiver in NMEA-0183 format at 115200 default baud rate. When idle, this pin output HIGH.
43	RXD_B	UART serial data input, 3.3V LVTTTL. One full-duplex asynchronous serial UART port is implemented. This UART input is normally for sending commands or information to the receiver in SkyTraq binary protocol at 115200 default baud rate. In the idle condition, this pin should be driven HIGH. If the driving circuitry is powered independently of PX1172RH, ensure that this pin is not driven to HIGH when PX1172RH is put to sleep, or a 10K-ohm series resistor can be added to minimize leakage current. RTCM-SC104 correction data or base station SkyTraq raw measurement data can also be sent to this UART input.
44	SDA	Not used, leave unconnected
45	SCL	Not used, leave unconnected
46,47	NC	No connection, empty pin

48	GND	Ground
49	RSTN	External active-low reset input to the baseband. Only needed when power supply rise time is very slow or software controlled reset is desired.
50	BOOT_SEL	No connection for normal use. Pull-low for loading firmware into empty or corrupted Flash memory from ROM mode.
51	TRIG	External interrupt trigger input
52	NC	No connection, empty pin
53	1PPS	One-pulse-per-second (1PPS) time mark output, 3.3V LV-TTL. The rising edge synchronized to UTC second when getting 3D position fix. The pulse duration is about 100msec at rate of 1 Hz.
54	NC	No connection, empty pin

When in use, connect the two antennas. The RTCM correction data can be input from either pin-43 RXD\_B or pin-26 RXD2\_B, but not both. NMEA result is output over TXD\_B.

**MECHANICAL DIMENSION**

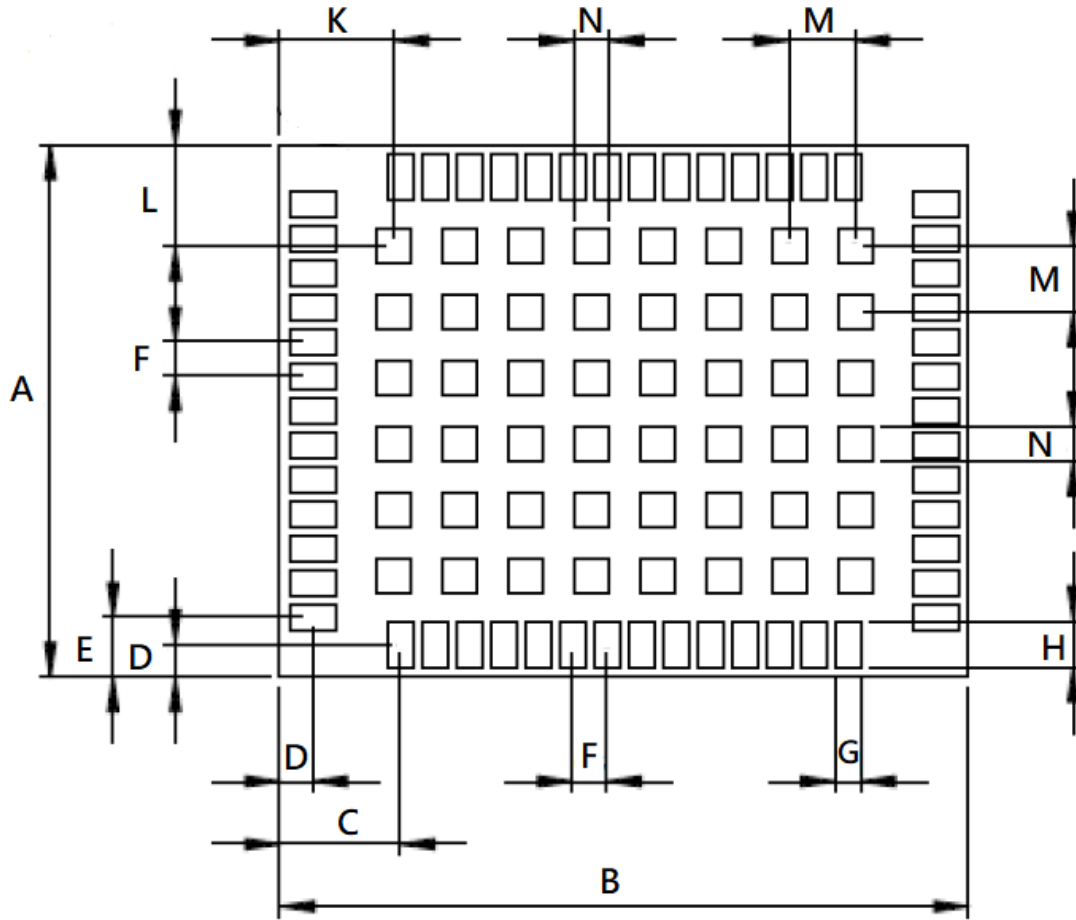

Symbol	Dimension (mm)
A	17.00
B	22.00
C	3.85
D	1.05
E	1.90
F	1.10
G	0.80
H	1.50
K	3.65
L	3.25
M	2.10
N	1.10

## ELECTRICAL SPECIFICATIONS



### ABSOLUTE MAXIMUM RATINGS

Parameter	Minimum	Maximum	Condition
Supply Voltage (VCC)	-0.5	3.6	Volt
Backup Battery Voltage (V_BCKP)	-0.5	3.6	Volt
Input Pin Voltage	-0.5	VCC+0.5	Volt
Input Power at RF_IN		+5	dBm
Storage Temperature	-55	+100	degC


### OPERATING CONDITIONS

Parameter	Min	Typ	Max	Unit
Supply Voltage (VDD33)	3	3.3	3.6	Volt
Acquisition Current (exclude active antenna current)		250		mA
Tracking Current (exclude active antenna current)		250		mA
Backup Voltage (V_BCKP)	1.3		3.6	Volt
Backup Current (VDD33 voltage applied)		54		uA
Backup Current (VDD33 voltage off)		13		uA
Output Low Voltage			0.4	Volt
Output HIGH Voltage	2.4			Volt
Input LOW Voltage			0.8	Volt
Input HIGH Voltage	2			Volt
Input LOW Current	-10		10	uA
Input HIGH Current	-10		10	uA
RF Input Impedance (RF_IN1, RFIN2)		50		Ohm

**APPLICATION CIRCUIT**

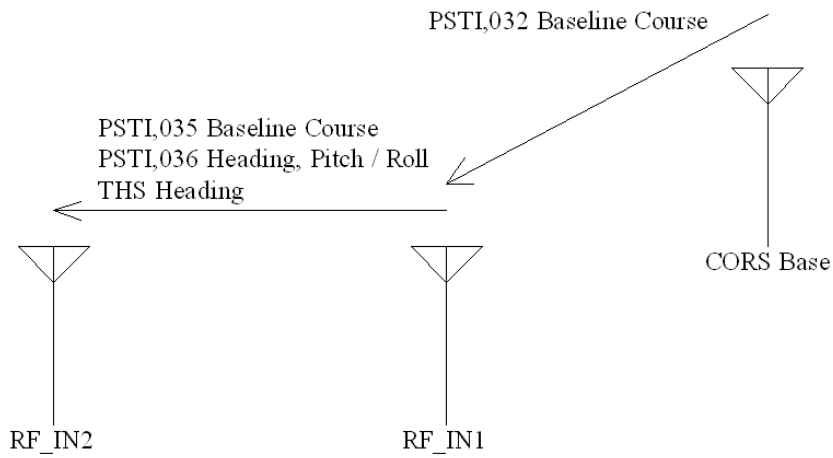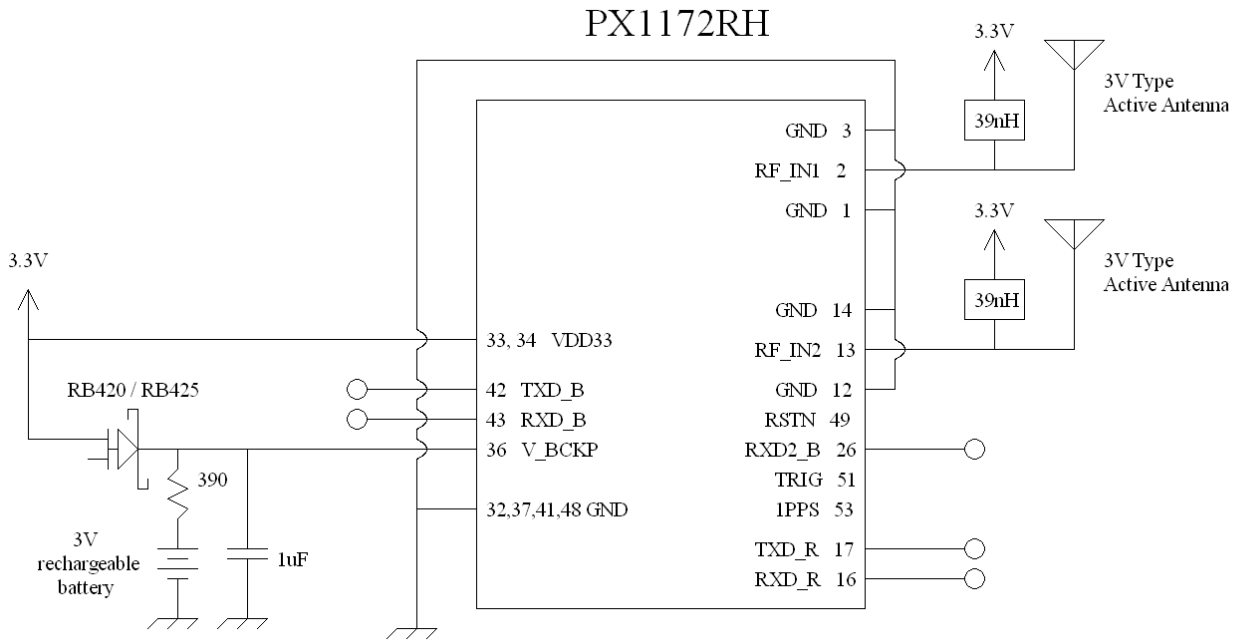

## RECOMMENDED REFLOW PROFILE

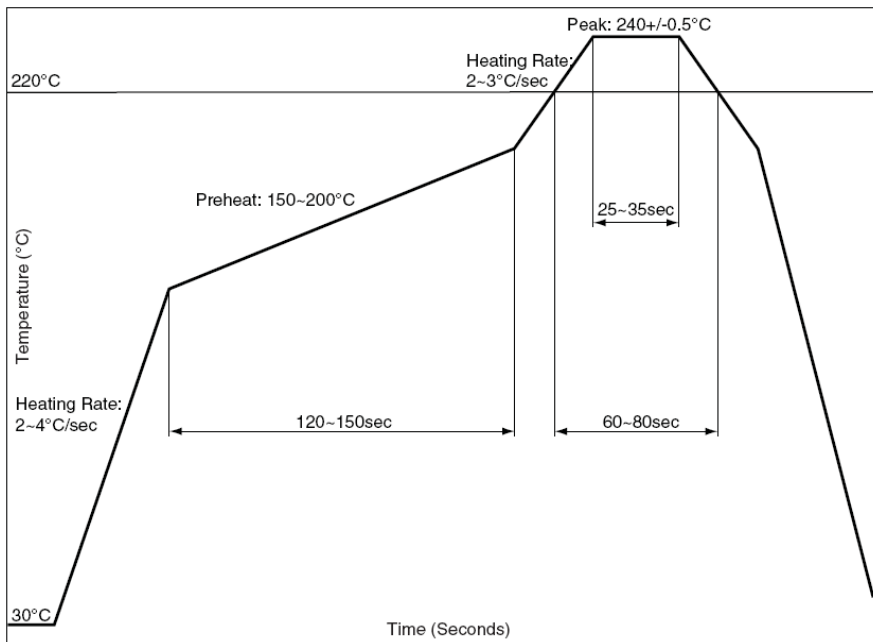

The reflow profile shown above should not be exceeded, since excessive temperatures or transport times during reflow can damage the module. Cooling temperature fall rate: max 3°C / sec

## ANTENNA CONSIDERATIONS

The PX1172RH is designed to be used with GPS L1/L2C, GLONASS L1/L2, Beidou B1I/B2I, Galileo E1/E5b multi-frequency active antenna. Antenna with gain up to 40dB and noise figure less than 2dB can be used. It is important to select a high-performance antenna to achieve optimal RTK performance.

## POWER SUPPLY REQUIREMENT

PX1172RH requires a stable power supply, avoid ripple on VCC pin (<50mVpp). Power supply noise can affect the receiver's sensitivity. Bypass capacitors should be placed close to the module VCC pin, with values adjusted depending on the amount and type of noise present on the supply line.

## BACKUP SUPPLY

The purpose of backup supply voltage pin (V\_BCKP) is to keep the SRAM memory and the RTC powered when the module is powered down. This enables the module to have a faster time-to-first-fix when the module is powered on again. The backup current drain is less than 55 $\mu$ A. In normal powered on state, the internal processor access the SRAM and current drain is higher in active mode

## 1PPS OUTPUT

A 1 pulse per second signal (100msec HIGH duration) is generated on 1PPS pin when the receiver has 3D position fix using 4 or more satellites. The rising edge of the pulse is aligned with UTC second, with accuracy of about 10nsec. It outputs constant LOW when no position fix is available initially.

## LAYOUT GUIDELINES

Separate RF and digital circuits into different PCB regions.

It is necessary to maintain 50-ohm impedance throughout the entire RF signal path. Try keeping the RF signal path as short as possible.

Do not route the RF signal line near noisy sources such as digital signals, oscillators, switching power supplies, or other RF transmitting circuit. Do not route the RF signal under or over any other components (including PX1172RH), or other signal traces. Do not route the RF signal path on an inner layer of a multi-layer PCB to minimize signal loss.

Avoid sharp bends for RF signal path. Make two 45-deg bends or a circular bend instead of a single 90-degree bend if needed.

Avoid vias with RF signal path whenever possible. Every via adds inductive impedance. Vias are acceptable for connecting the RF grounds between different layers. Each of the module's ground pins should have short trace tying immediately to the ground plane below through a via.

The bypass capacitors should be low ESR ceramic types and located directly adjacent to the pin they are for.

## **HANDLING GUIDELINE**

The PX1172RH modules are rated MSL4, must be used for SMT reflow mounting within 72 hours after taken out from the vacuumed ESD-protective moisture barrier bag in factory condition < 30degC / 60% RH. If this floor life time is exceeded, or if the received ESD-protective moisture barrier bag is not in vacuumed state, then the device need to be pre-baked before SMT reflow process. Baking is to be done at 85degC for 8 to 12 hours. Once baked, floor life counting begins from 0, and has 72 hours of floor life at factory condition < 30degC / 60% RH.

PX1172RH module is ESD sensitive device and should be handled with care.

## **RTK Usage Guideline**

Below conditions are required for getting RTK fix solution. If the conditions are not met, PX1172RH will only have float or DGPS/3D solution and behave like a normal GNSS receiver.

- \* Base and rover distance under 30Km
- \* Open sky environment without interference
- \* Signal over 37dB/Hz
- \* 8 or more satellites above 15 degree elevation angle with good satellite geometry or low DOP value; generally more satellites will have faster RTK fix

## NMEA Output Description

The output protocol supports NMEA-0183 standard. The implemented messages include GGA, GLL, GSA, GSV, VTG, RMC, ZDA and THS messages. The NMEA message output has the following sentence structure:

\$aacc,c-c\*hh<CR><LF>

The detail of the sentence structure is explained in Table 1.

Table 1: The NMEA sentence structure

character	HEX	Description
"\$"	24	Start of sentence.
Aacc		Address field. "aa" is the talker identifier. "ccc" identifies the sentence type.
","	2C	Field delimiter.
C-c		Data sentence block.
"*"	2A	Checksum delimiter.
Hh		Checksum field.
<CR><LF>	0D0A	Ending of sentence. (carriage return, line feed)

Table 2: Overview of SkyTraq receiver's NMEA messages

<b>\$GPGGA</b>	Time, position, and fix related data of the receiver.
<b>\$GNGLL</b>	Position, time and fix status.
<b>\$GNGSA</b>	Used to represent the ID's of satellites which are used for position fix. When GPS satellites are used for position fix, \$GNGSA sentence is output with system ID 1. When GLONASS satellites are used for position fix, \$GNGSA sentence is output with system ID 2. When Galileo satellites are used for position fix, \$GNGSA sentence is output with system ID 3. When BDS satellites are used for position fix, \$GNGSA sentence is output with system ID 4.
<b>\$GPGSV</b> <b>\$GLGSV</b> <b>\$GAGSV</b> <b>\$GBGSV</b>	Satellite information about elevation, azimuth and CNR, \$GPGSV is used for GPS satellites, \$GLGSV is used for GLONASS satellites, \$GAGSV is used for GALILEO satellites, while \$GBGSV is used for BDS satellites
<b>\$GNRMC</b>	Time, date, position, course and speed data.
<b>\$GNVTG</b>	Course and speed relative to the ground.
<b>\$GNZDA</b>	UTC, day, month and year and time zone.
<b>\$GNTHS</b>	True Heading and Status.

The formats of the supported NMEA messages are described as follows:

**GGA – Global Positioning System Fix Data**

Time, position and fix related data for a GPS receiver.

Structure:

\$GPGGA,hhmmss.sss,ddmm.mmmmmmm,a,dddmm.mmmmmmm,a,x,xx,x.x,x.x,M,x.x,M,x.x,xxxx\*hh<CR><LF>  
                   1                  2                  3                  4                  5 6 7 8 9          10          11 12

Example:

\$GPGGA,033010.000,2447.0895508,N,12100.5234656,E,4,12,0.7,94.615,M,19.600,M,,0000\*66<CR><LF>

Field	Name	Example	Description
1	UTC Time	033010.000	UTC of position in hhmmss.sss format, (000000.000 ~ 235959.999)
2	Latitude	2447.0895508	Latitude in ddmm.mmmmmmm format Leading zeros transmitted
3	N/S Indicator	N	Latitude hemisphere indicator, 'N' = North, 'S' = South
4	Longitude	12100.5234656	Longitude in dddmm.mmmmmmm format Leading zeros transmitted
5	E/W Indicator	E	Longitude hemisphere indicator, 'E' = East, 'W' = West
6	GPS quality indicator	4	GPS quality indicator 0: position fix unavailable 1: valid position fix, SPS mode 2: valid position fix, differential GPS mode 3: GPS PPS Mode, fix valid 4: Real Time Kinematic. System used in RTK mode with fixed integers 5: Float RTK. Satellite system used in RTK mode., floating integers 6: Estimated (dead reckoning) Mode 7: Manual Input Mode 8: Simulator Mode
7	Satellites Used	12	Number of satellites in use, (00 ~ 12)
8	HDOP	0.7	Horizontal dilution of precision, (0.0 ~ 99.9)
9	Altitude	94.615	mean sea level (geoid), (-9999.9 ~ 17999.9)
10	Geoidal Separation	19.600	Geoidal separation in meters
11	Age of Differential GPS data		Age of Differential GPS data NULL when DGPS not used
12	DGPS Station ID	0000	Differential reference station ID, 0000 ~ 1023
13	Checksum	66	

**GLL – Latitude/Longitude**

Latitude and longitude of current position, time, and status.

Structure:

\$GNGLL,ddmm.mmmmmmm,a,dddmm.mmmmmmm,a,hhmmss.sss,A,a\*hh<CR><LF>  
 1 2 3 4 5 6 7 8

Example:

\$GNGLL,2447.0895508,N,12100.5234656,E,033010.000,A,D\*48<CR><LF>

Field	Name	Example	Description
1	Latitude	2447. 0895508	Latitude in ddmm.mmmmmmm format Leading zeros transmitted
2	N/S Indicator	N	Latitude hemisphere indicator 'N' = North 'S' = South
3	Longitude	12100. 5234656	Longitude in dddmm.mmmmmmm format Leading zeros transmitted
4	E/W Indicator	E	Longitude hemisphere indicator 'E' = East 'W' = West
5	UTC Time	033010.000	UTC time in hhmmss.sss format (000000.000 ~ 235959.999)
6	Status	A	Status, 'A' = Data valid, 'V' = Data not valid
7	Mode Indicator	D	Mode indicator 'A' = Autonomous mode 'D' = Differential mode 'E' = Estimated (dead reckoning) mode 'M' = Manual input mode 'S' = Simulator mode 'N' = Data not valid
8	Checksum	48	

**GSA – GNSS DOP and Active Satellites**

GNSS receiver operating mode, satellites used in the navigation solution reported by the GGA or GNS sentence and DOP values.

Structure:

```
$GNGSA,A,x,xx,xx,xx,xx,xx,xx,xx,xx,xx,xx,xx,x.x,x.x,x.x,x*hh<CR><LF>
  1 2 3 3 3 3 3 3 3 3 3 3 3 4 5 6 7 8
```

Example:

```
$GNGSA,A,3,05,12,13,15,20,21,24,193,,,,,1.2,0.7,1.0,1*08<CR><LF>
$GNGSA,A,3,01,03,04,06,07,13,16,21,26,,,,,1.2,0.7,1.0,4*34<CR><LF>
```

Field	Name	Example	Description
1	Mode	A	Mode 'M' = Manual, forced to operate in 2D or 3D mode 'A' = Automatic, allowed to automatically switch 2D/3D
2	Mode	3	Fix type 1 = Fix not available 2 = 2D 3 = 3D
3	Satellite used 1~12	05,12,13,15,20,21,24,193	01 ~ 32 are for GPS; 33 ~ 64 are for WAAS (PRN minus 87); 193 ~ 199 are for QZSS; 65 ~ 88 are for GLONASS (GL PRN) ; 01 ~ 36 are for GALILEO (GA PRN); 01 ~ 37 are for BDS (BD PRN). GPS, GLONASS, GALILEO and BDS satellites are differentiated by the GNSS system ID in table 3. Maximally 12 satellites are included in each GSA sentence.
4	PDOP	1.2	Position dilution of precision (0.0 to 99.9)
5	HDOP	0.7	Horizontal dilution of precision (0.0 to 99.9)
6	VDOP	1.0	Vertical dilution of precision (0.0 to 99.9)
7	GNSS System ID	1	GNSS system ID* 1 = GPS 2 = GLONASS 3 = GALILEO 4 = BDS 5 = IRNSS
8	Checksum	08	

\*GNSS System ID identifies the GNSS system ID according to Table 3.

\*GNSS Signal ID identifies the GNSS signal name according to Table 3.

Table 3: GNSS Identification Table for GSA, GSV

System	System ID (Talker)	Signal ID	Signal Name
GPS	1 (GP)	0	All signals
		1	L1 C/A
		2	L1 P(Y)
		3	L1C
		4	L2 P(Y)
		5	L2C-M
		6	L2C-L
		7	L5-I
		8	L5-Q
GLONASS	2 (GL)	0	All signals
		1	G1 C/A
		2	G1P
		3	G2 C/A
		4	GLONASS (M) G2P
GALILEO	3 (GA)	0	All signals
		1	E5a
		2	E5b
		3	E5 a+b
		4	E6-A
		5	E6-BC
		6	L1-A
		7	L1-BC
BDS	4 (BD)	0	All signals
		1	B1
		5	B2A
		B	B2
		8	B3
		3	B1C
IRNSS	5 (GI)	0	All signals
		4	L5

**GSV – GNSS Satellites in View**

Number of satellites (SV) in view, satellite ID numbers, elevation, azimuth, and SNR value. Four satellites maximum per transmission.

Structure:

```
$GPGSV,x,x,xx,xx,xx,xxx,xx,...,xx,xx,xxx,xx,x *hh<CR><LF>
  1 2 3 4 5 6 7 4 5 6 7 8 9
```

Example:

```
$GPGSV,3,1,10,24,83,125,48,193,66,057,44,21,53,277,45,15,43,034,47,1*58<CR><LF>
$GPGSV,3,2,10,20,40,325,43,05,16,113,40,13,15,050,39,12,14,146,42,1*6E<CR><LF>
$GPGSV,3,3,10,10,13,314,,32,06,261,,1*62<CR><LF>
$GPGSV,2,1,05,24,83,125,49,193,66,057,44,15,43,034,45,05,16,113,36,6*5B<CR><LF>
$GPGSV,2,2,05,12,14,146,37,6*57<CR><LF>
$GBGSV,3,1,09,13,65,247,45,06,60,334,43,03,59,204,41,26,58,153,47,1*7E<CR><LF>
$GBGSV,3,2,09,16,57,325,45,01,53,142,42,21,52,046,47,04,38,118,,1*7A<CR><LF>
$GBGSV,3,3,09,07,20,169,37,1*40<CR><LF>
$GBGSV,2,1,07,13,65,247,47,06,60,334,47,03,59,204,47,16,57,325,47,3*7C<CR><LF>
$GBGSV,2,2,07,01,53,142,49,04,38,118,45,07,20,169,43,3*44<CR><LF>
```

Field	Name	Example	Description
1	Number of message	3	Total number of GSV messages to be transmitted (1-5)
2	Sequence number	1	Sequence number of current GSV message
3	Satellites in view	10	Total number of satellites in view (00 ~ 20)
4	Satellite ID	24	01 ~ 32 are for GPS; 33 ~ 64 are for WAAS (PRN minus 87); 193 ~ 199 are for QZSS; 65 ~ 88 are for GLONASS (GL PRN) ; 01 ~ 36 are for GALILEO (GA PRN); 01 ~ 37 are for BDS (BD PRN). GPS, GLONASS, GALILEO and BDS satellites are differentiated by the GNSS system ID in table 3. Maximally 4 satellites are included in each GSV sentence.
5	Elevation	83	Satellite elevation in degrees, (00 ~ 90)
6	Azimuth	125	Satellite azimuth angle in degrees, (000 ~ 359 )
7	SNR	48	C/No in dB (00 ~ 99) Null when not tracking
8	Signal ID	1	Signal ID*
9	Checksum	58	

**RMC – Recommended Minimum Specific GNSS Data**

Time, date, position, course and speed data provided by a GNSS navigation receiver.

Structure:

\$GPRMC,hhmmss.sss,A,dddmm.mmmmmmm,a,dddmm.mmmmmmm,a,x.x,x.x,ddmmyy,,,a,a\*hh<CR><LF>  
                   1      2                  3                  4                  5                  6  7  8      9      1011 12

Example:

\$GNRMC,033010.000,A,2447.0895508,N,12100.5234656,E,000.0,000.0,111219,,,R,V\*18<CR><LF>

Field	Name	Example	Description
1	UTC time	033010.000	UTC time in hhmmss.sss format (000000.00 ~ 235959.999)
2	Status	A	Status 'V' = Navigation receiver warning 'A' = Data Valid
3	Latitude	2447.0895508	Latitude in dddmm.mmmmmmm format Leading zeros transmitted
4	N/S indicator	N	Latitude hemisphere indicator 'N' = North 'S' = South
5	Longitude	12100.5234656	Longitude in dddmm.mmmmmmm format Leading zeros transmitted
6	E/W Indicator	E	Longitude hemisphere indicator 'E' = East 'W' = West
7	Speed over ground	000.0	Speed over ground in knots (000.0 ~ 999.9)
8	Course over ground	000.0	Course over ground in degrees (000.0 ~ 359.9)
9	UTC Date	111219	UTC date of position fix, ddmmyy format
10	Mode indicator	R	Mode indicator 'A' = Autonomous mode 'D' = Differential mode 'E' = Estimated (dead reckoning) mode 'F' = Float RTK. Satellite system used in RTK mode, floating integers 'M' = Manual Input Mode 'N' = Data not valid 'P' = Precise 'R' = Real Time Kinematic. System used in RTK mode with fixed integers 'S' = Simulator Mode
11	Navigation status	V	Navigation status indicator according to IEC61108 requirement on 'Navigational (or Failure) warnings and status indicators'. 'S' = Safe 'C' = Caution 'U' = Unsafe 'V' = Navigation status not valid, equipment is not providing navigation status indicator.
12	checksum	18	

### VTG – Course Over Ground and Ground Speed

The actual course and speed relative to the ground.

Structure:

GPVTG,x.x,T,,M,x.x,N,x.x,K,a\*hh<CR><LF>  
1 2 3 4 5

Example:

\$GNVTG,000.0,T,,M,000.0,N,000.0,K,D\*16<CR><LF>

Field	Name	Example	Description
1	Course	000.0	True course over ground in degrees (000.0 ~ 359.9)
2	Speed	000.0	Speed over ground in knots (000.0 ~ 999.9)
3	Speed	000.0	Speed over ground in kilometers per hour (000.0 ~ 1800.0)
4	Mode	D	Mode indicator 'A' = Autonomous mode 'D' = Differential mode 'E' = Estimated (dead reckoning) mode 'M' = Manual input mode 'N' = Data not valid 'P' = Precise 'S' = Simulator mode
5	Checksum	16	

### ZDA – TIME AND DATE

UTC, day, month, year and local time zone

Structure:

\$GPZDA,hhmmss.sss,xx,xx,xxxx,xx,xx\*hh<CR><LF>  
1 2 3 4 5 6 7

Example:

\$GNZDA,033010.000,11,12,2019,00,00\*40<CR><LF>

Field	Name	Example	Description
1	UTC time	033010.000	UTC time in hhmmss.ss format (000000.00 ~ 235959.999)
2	UTC Day	11	UTC time: day (01 ~ 31)
3	UTC Month	12	UTC time: month (01 ~ 12)
4	UTC Year	2019	UTC time: year (4 digit format)
5	Local zone hour	00	Local zone hours (00 ~ +/- 13)
6	Local zone minutes	00	Local zone minutes (00 ~59)
7	Checksum	40	Checksum

**THS – True Heading and Status**

Actual vessel heading in degrees True produced by any device or system producing true heading. This sentence includes a “Mode indicator” field providing critical safety related information about the heading data, and replaces the HDT sentence.

Structure:

\$GP<sup>1</sup>THS, x.x,a\*hh<CR><LF>  
1 2 3

Example:

\$GN<sup>2</sup>THS,121.15.A\*1F<CR><LF>

Field	Name	Example	Description
1	Heading	121.15	Heading, degrees True
2	Mode	A	Mode indicator 'A' = Autonomous 'E' = Estimated (dead reckoning) 'M' = Manual input 'S' = Simulator 'V' = Data not valid
3	Checksum	1F	Checksum

### STI,005 – Time Stamp Output

An output message, ID 0x005, contains module pin-4 event-triggered time stamp. The trigger input should be spaced more than 1msec apart, not more than 10 triggers between update rate interval.

Structure:

```
$PSTI,005,hhmmss.ssssss,xx,xx,xxxx,,,,*hh<CR><LF>
```

1            2        3 4 5        11

Example:

```
$PSTI,005,121959.0000003,20,07,2020,,,,*34<CR><LF>
```

Field	Name	Example	Description
1	ID	005	Proprietary NMEA message identifier
2	UTC time	121959.0000003	Time-stamp UTC time in hhmmss.ssssss format (000000.0000000 ~ 235959.9999999)
3	UTC Day	20	Time-stamp UTC time: day (01 ~ 31)
4	UTC Month	07	Time-stamp UTC time: month (01 ~ 12)
5	UTC Year	2020	Time-stamp UTC time: year (4 digit format)
6	Reserved		
7	Reserved		
8	Reserved		
9	Reserved		
10	Reserved		
11	Checksum	34	Checksum

**STI,030– Recommended Minimum 3D GNSS Data**

Time, date, position, course and speed data provided by a GNSS navigation receiver.

Structure:

\$PSTI,030,hhmmss.sss,A,dddmm.mmmmmmm,a,dddmm.mmmmmmm,a,x.x,x.x,x.x,x.x,ddmmyy,a.x.x,x.x\*hh<CR><LF>  
 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

Example:

\$PSTI,030,033010.000,A,2447.0895508,N,12100.5234656,E,94.615,0.00,-0.01,0.04,111219,R,0.999,3.724\*1A  
 <CR><LF>

Field	Name	Example	Description
1	UTC time	033010.000	UTC time in hhmmss.sss format (000000.00 ~ 235959.999)
2	Status	A	Status 'V' = Navigation receiver warning 'A' = Data Valid
3	Latitude	2447.0895508	Latitude in dddmm.mmmmmmm format Leading zeros transmitted
4	N/S indicator	N	Latitude hemisphere indicator 'N' = North 'S' = South
5	Longitude	12100.5234656	Longitude in dddmm.mmmmmmm format Leading zeros transmitted
6	E/W Indicator	E	Longitude hemisphere indicator 'E' = East 'W' = West
7	Altitude	94.615	mean sea level (geoid), (-9999.999 ~ 17999.999)
8	East Velocity	0.00	'East' component of ENU velocity (m/s)
9	North Velocity	-0.01	'North' component of ENU velocity (m/s)
10	Up Velocity	0.04	'Up' component of ENU velocity (m/s)
11	UTC Date	111219	UTC date of position fix, ddmmyy format
12	Mode indicator	R	Mode indicator 'A' = Autonomous mode 'D' = Differential mode 'E' = Estimated (dead reckoning) mode 'F' = Float RTK. Satellite system used in RTK mode, floating integers 'M' = Manual input mode 'N' = Data not valid 'P' = Precise 'R' = Real Time Kinematic. System used in RTK mode with fixed integers 'S' = Simulator mode
13	RTK Age	0.999	Age of differential
14	RTK Ratio	3.724	AR ratio factor for validation
15	Checksum	1A	

**STI,032– RTK Baseline Data**

Time, date, status and baseline related data provided by a GNSS navigation receiver.

Structure:

\$PSTI,032,hhmmss.sss,ddmmyy,A,R,x.xxx,x.xxx,x.xxx,x.xxx,x.xx,,,,,\*hh<CR><LF>  
 1 2 3 4 5 6 7 8 9

Example:

\$PSTI,032,033010.000,111219,A,R,-4.968,-10.817,-1.849,12.046,204.67,,,,\*39

Field	Name	Example	Description
1	UTC time	033010.000	UTC time in hhmmss.sss format (000000.000~235959.999)
2	UTC Date	111219	UTC date of position fix, ddmmyy format
3	Status	A	Status 'V' = Void 'A' = Active
4	Mode indicator	R	Mode indicator 'F' = Float RTK. System used in RTK mode with float ambiguity 'R' = Real Time Kinematic. System used in RTK mode with fixed ambiguity
5	East-projection of baseline	-4.968	East-projection of baseline, meters
6	North-projection of baseline	-10.817	North-projection of baseline, meters
7	Up-projection of baseline	-1.849	Up-projection of baseline, meters
8	Baseline length	12.046	Baseline length, meters
9	Baseline course	204.67	Baseline course (angle between baseline vector and north direction), degrees
10	Reserve		Reserve
11	Reserve		Reserve
12	Reserve		Reserve
13	Reserve		Reserve
14	Reserve		Reserve
15	Checksum	39	

**STI,033– RTK RAW Measurement Monitoring Data**

Time, date, and raw measurement monitoring data provided by a GNSS navigation receiver.

Structure:

\$PSTI,033,hhmmss.sss,ddmmyy,x,R,x,G,x,x,,,C,x,x,,,E,x,x,,,R,x,x,,\*hh <CR><LF>  
 1 2 3 4 5 6 7 8 11 16 21

Example:

\$PSTI,033,110431.000,150517,2,R,1,G,1,0,,,C,0,0,,,E,0,0,,,R,0,0,,\*72

Field	Name	Example	Description
1	UTC time	110431.000	UTC time in hhmmss.sss format (000000.000~235959.999)
2	UTC Date	150517	UTC date of position fix, ddmmyy format
3	Version	2	
4	Receiver	R	R – Rover; B – Base
5	Number of total cycle-slipped raw measurements	1	Number of total cycle-slipped raw measurements, this statistic is only summed by the measurements which are valid for RTK
6	Designate system type	G	GPS
7	Number of cycle-slipped raw measurements of designate signal type of GPS L1	1	Number of cycle-slipped raw measurements of designate signal type of all satellite type, this statistic is only summed by the measurements which are valid for RTK
8	Number of cycle-slipped raw measurements of designate signal type of GPS L2	0	Number of cycle-slipped raw measurements of designate signal type of all satellite type, this statistic is only summed by the measurements which are valid for RTK
9	Reserve for GPS frequency band		Reserve
10	Reserve for GPS frequency band		Reserve
11	Designate system type	C (same as RTK lib)	BDS
12	Number of cycle-slipped raw measurements of designate signal type of BDS B1	0	Number of cycle-slipped raw measurements of designate signal type of all satellite type, this statistic is only summed by the measurements which are valid for RTK
13	Number of cycle-slipped raw measurements of designate signal type of BDS B2	0	Number of cycle-slipped raw measurements of designate signal type of all satellite type, this statistic is only summed by the measurements which are valid for RTK
14	Reserve for BDS frequency band		Reserve
15	Reserve for BDS frequency band		Reserve
16	Designate system type	E	Galileo
17	Number of cycle-slipped raw measurements of designate signal type of Galileo E1	0	Number of cycle-slipped raw measurements of designate signal type of all satellite type, this statistic is only summed by the measurements which are valid for RTK
18	Number of cycle-slipped raw measurements of designate signal type of Galileo E5b	0	Number of cycle-slipped raw measurements of designate signal type of all satellite type, this statistic is only summed by the measurements which are valid for RTK
19	Reserve for Galileo frequency band		Reserve
20	Reserve for Galileo frequency band		Reserve
21	Designate system type	R	Glionass
22	Number of cycle-slipped raw measurements of designate signal type of Glionass G1	0	Number of cycle-slipped raw measurements of designate signal type of all satellite type, this statistic is only summed by the measurements which are valid for RTK
23	Number of cycle-slipped raw measurements of designate	0	Number of cycle-slipped raw measurements of designate signal type of all satellite type, this statistic is only summed by the

	signal type of Glonass G2		measurements which are valid for RTK
24	Reserve for Glonass frequency band		Reserve
25	Reserve for Glonass frequency band		Reserve
26	Checksum	72	

**STI,035 – RTK Baseline Data of Rover Moving Base Receiver**

Time, date, status and baseline related data of GNSS rover moving base receiver provided by GNSS precisely kinematic base receiver.

Structure:

\$PSTI,035,hhmmss.sss,ddmmyy,A,R,x.xxx,x.xxx,x.xxx,x.xxx,x.xx,,,,,\*hh<CR><LF>  
 1            2        3 4 5    6    7        8    9

Example:

\$PSTI,035,041457.000,170316,A,R,0.603,-0.837,-0.089,1.036,144.22,,,,\*1B

Field	Name	Example	Description
1	UTC time	041457.000	UTC time in hhmmss.sss format (000000.000~235959.999)
2	UTC Date	170316	UTC date of position fix, ddmmyy format
3	Status	A	Status 'V' = Void 'A' = Active
4	Mode indicator	R	Mode indicator 'F' = Float RTK. System used in RTK mode with float ambiguity 'R' = Real Time Kinematic. System used in RTK mode with fixed ambiguity
5	East-projection of baseline	0.603	East-projection of baseline, meters
6	North-projection of baseline	-0.837	North-projection of baseline, meters
7	Up-projection of baseline	-0.089	Up-projection of baseline, meters
8	Baseline length	1.036	Baseline length, meters
9	Baseline course	144.22	Baseline course (angle between baseline vector and north direction), degrees
10	Reserve		Reserve
11	Reserve		Reserve
12	Reserve		Reserve
13	Reserve		Reserve
14	Reserve		Reserve
15	Checksum	1B	

**PSTI,036 – Heading, Pitch and Roll Messages of vehicle**

Heading, Pitch and Roll messages provided by GNSS RTK rover moving base receiver. This message will also be shown in RTK precisely kinematic base mode GNSS receiver.

Structure:

\$PSTI,036,hhmmss.sss,ddmmyy,x.xx,x.xx,x.xx,R\*hh<CR><LF>

Example:

\$PSTI,036,054314.000,030521,191.69,-16.35,0.00,R\*4D

Field	Name	Example	Description
1	UTC time	054314.000	UTC time in hhmmss.sss format (000000.000~235959.999)
2	UTC Date	030521	UTC date of position fix, ddmmyy format
3	Heading	191.69	Heading, 0~359.99 when mode indicator is 'R'
4	Pitch	-16.35	Pitch: -90~90 degree when mode indicator is 'R', else null 0: when absolute value of "heading offset" > 45 && < 135; i.e. antenna baseline toward perpendicular to vehicle centerline. Heading offset is the angle between the baseline course from north and vehicle centerline.
5	Roll	0.00	Roll: -90~90 degree when mode indicator is 'R', else null 0: when absolute value of "heading offset" <= 45 or >= 135; i.e. antenna baseline toward parallel to vehicle centerline. Heading offset is the angle between the baseline course from north and vehicle centerline.
6	Mode indicator	R	Mode indicator 'N' = Data not valid 'A' = Autonomous mode 'D' = Differential mode 'E' = Estimated (dead reckoning) mode 'M' = Manual input mode 'S' = Simulator mode 'F' = Float RTK. Satellite system used in RTK mode, floating integers 'R' = Real Time Kinematic. System used in RTK mode with fixed integers
7	Checksum	4D	

**ORDERING INFORMATION**

<b>Model Name</b>	<b>Description</b>
PX1172RH	L1/L2 Multi-Band Multi-GNSS RTK Position & Heading Receiver Module
PX1175RH	L1/L5 Multi-Band Multi-GNSS RTK Position & Heading Receiver Module
PX1170RH	L1 Multi-GNSS RTK Position & Heading Receiver Module

## Revision History

Revision	Date	Description
1	March 1, 2021	Initial release
2	June 8, 2021	Added PSTI,036
3	June 20, 2022	Updated QZSS PRN numbering range
4	March 18, 2024	Updated Ordering Information
5	December 27, 2024	Updated qualification status

The information provided is believed to be accurate and reliable. These materials are provided to customers and may be used for informational purposes only. No responsibility is assumed for errors or omissions in these materials, or for its use. Changes to specification can occur at any time without notice.

These materials are provided "as is" without warranty of any kind, either expressed or implied, relating to sale and/or use including liability or warranties relating to fitness for a particular purpose, consequential or incidental damages, merchantability, or infringement of any patent, copyright or other intellectual property right. No warrant on the accuracy or completeness of the information, text, graphics or other items contained within these materials. No liability assumed for any special, indirect, incidental, or consequential damages, including without limitation, lost revenues or lost profits, which may result from the use of these materials.

The product is not intended for use in medical, life-support devices, or applications involving potential risk of death, personal injury, or severe property damage in case of failure of the product.